


## FUSE PANEL

- A—Horn/Dome  
15 AMP — Light Blue
- B—Ignition  
20 AMP — Yellow
- C—Instrument Lamps  
5 AMP — Tan
- D—Radio  
10 AMP — Red
- E—Wiper  
25 AMP — White
- F—Heater and/or A/C  
25 AMP — White
- G—Gauges  
20 AMP — Yellow
- H—Tail and Illum. Lamps  
20 AMP — Yellow
- I—Emergency Hazard Warning Flashers  
and Stop Light  
15 AMP — Light Blue
- J—Turn Signal and Back-up Lights  
15 AMP — Light Blue
- K—Hazard Flasher
- L—Battery Auxillary  
25 AMP — White
- M—Ignition Auxillary  
25 AMP — White

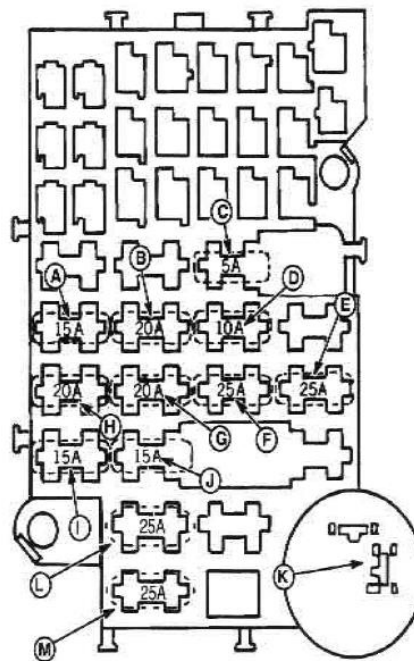

## FUSE PANELS

The fuse panel in Fig. 1 is connected to the main fuse panel shown on the previous page and is located on the firewall on the driver's side.

### RELAYS:

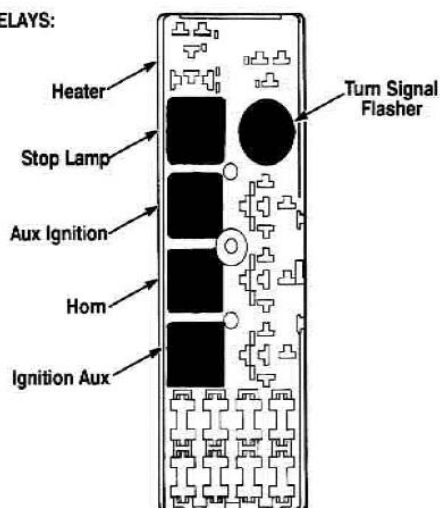


Fig. 1 Fuse Panel

The fuse panel in Fig. 2 is located on the firewall near the main fuse panel. This panel is used in conjunction with the electronic transmission. The relays and fuses are accessible by removing the 8 screws that hold the cover plate in place.

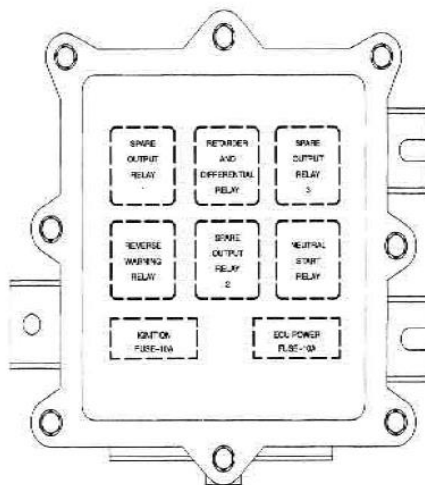


Fig. 2 Fuse Panel