


FUSES & CIRCUITS - CHASSIS

Distribution Panel - Front

The front electrical panel, located on the roadside, ahead of the front wheel, contains the fuses, self resetting supply circuit breakers, solenoid and relays.

The automotive fuses and emergency flashers are located in the front electrical panel. The fuses are the standard plug-in type (ATO). When a fuse "BLOWS," the wire in middle of the plastic case will be broken. A bad or blown fuse must be replaced with a fuse of the same rating and type. Using a fuse of a different type rating will defeat the circuit protection provided by the fuse, which could result in damage to the motorhome's electrical system. If a fuse has been replaced and it "BLOWS" repeatedly, that may be an indication that a fault exists or an electronic component has failed. It is recommended that the motorhome be taken to a qualified RV technician before any future use to diagnose and repair the problem. Circuits are identified on the fuse label located on the inside of the electrical compartment door.

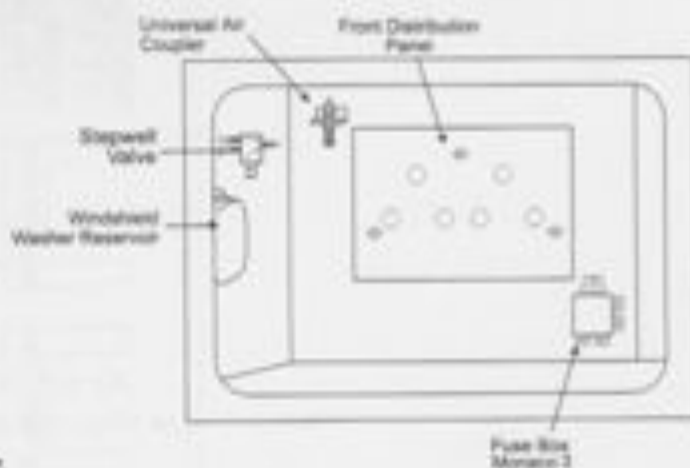

CIRCUIT BREAKERS & FUSES

HOUSE		
1	Reserved	
2	LP/CO Detector	3 amp Fuse
3	Power Seat (Driver)	15 amp Circuit Breaker
4	Power Seat (Passenger)	15 amp Circuit Breaker
5	Storage Lights	15 amp Fuse
6	Service Lights/LP SOL	15 amp Fuse
7	Auxiliary Start/TV AMP	7.5 amp Fuse
8	Reserved	
9	Map Lights	7.5 amp Fuse
10	CB Radio	2 amp Fuse
11	12 Volt Receptical	15 amp Fuse
12	Reserved	

CHASSIS		
13	Step Switch	5 amp Fuse
14	Step Motor	20 amp Fuse
15	Reserved	
16	Reserved	
17	Visor	15 amp Fuse
18	Step Cover	2 amp Fuse
19	Reserved	

ACCESSORIES			
20	Rear Vision	5 amp	Fuse
21	Leveling Jacks	15 amp	Fuse
22	Air Dumps	15 amp	Fuse
23	Reserved		
24	Reserved		

IGNITION			
25	Air Conditioner	20 amp	Fuse
26	Jack/Antenna Warning Lights	5 amp	Fuse
27	TV IGN Relay	7.5 amp	Fuse
28	Slide-out - IGN Relay	7.5 amp	Fuse
29	Mirror Heated	15 amp	Fuse
30	Mirror Control	1 amp	Fuse
31	Power Pedal	10 amp	Fuse
32	Reserved		
33	Step/ISO/Vac Sense	7.5 amp	Fuse

MARKER (CHASSIS)			
34	Marker Lights	7.5 amp	Fuse

CIRCUIT BREAKERS	
Refrigerator 2-Way/3-Way 5/30A	
Interior Fuse Panel 50A	